



OWNERS MANUAL

KXDMOTO.de

Manufacturer: Zhejiang Kingroma Industrial & Trading CO., LTD.

Address: NO.1 Baihe Road, Baihuashan Industrial Area, Wuyi, Zhejiang, China

Please note that this is a general manual. So, the style of the ATV that you have may differ from the picture shown in this manual.

Original instructions

Please read this owner's manual carefully before using this product! This is most important!
Please read this owner's manual carefully! It's good for driver's safety and vehicle's maintenance!

If the rider is without safety awareness or driving experiences, please do not drive under the adult's supervision! This is most important! It's very important for your safety.

This product is recommended for riders of 14 years old or over.

Do not lend the vehicle to others who don't know how to operate.

Please observe the local law and regulations.

Content

- Safety warning
- Compliance with the law
- Assembling
- The position of the VIN
- Key switch
- Function switch
- Charger
- Emergency turn off stop switch
- Burglar Alarm
- Tire and Tire pressure gauges
- Operating
 - Inspection before riding
 - Idling (**inspection**)
 - Front, rear suspension (**inspection**)
 - Front brake system (**inspection**)
 - Rear brake system (**inspection**)
 - Battery (**inspection**)
 - Tool bag (**inspection**)
 - Self-Protection (**inspection**)
- Starting
- Training
- Riding
- Parking
- Cleaning
- Storage
- Transport
- Delivery
- Maintenance & accessories
- Accessory description, data, circuit diagram, age warning and warning labels.

KXDMOTO.de

Safety warning

1. This vehicle is not a toy.
2. Rider under 16 years old must use this product under adult's supervision
3. Children must be trained before driving. This is very important.
4. Be sure of children's ability to forbid the risk. This is very important.
5. Children must understand the manual and the importance of warnings on the manual.
6. User must read the owner manual carefully and understand the content of the manual.
7. Incorrect operation of this ATV will result serious injury or even death.
- 8. Age limit warning.(See aluminum warning plate on the ATV)**
9. This product is not intended for OFF-ROAD use. Please get off the vehicle and walk with it when crossing the roads.
10. Never ride with more than one person.
11. Never attempt to operate this vehicle while under the influence of alcohol or drugs, avoid injury or death.
12. Please control the speed, do not drive at excessive speed.
13. The vehicle is not allowed to use in the adjustment or maintenance period.
14. Be sure the vehicle is in a good condition before using it.
15. Do not modify the vehicles or change the spare parts. This is unsafe and illegal.
16. The accelerating installation of the vehicle has been set. Users should not adjust it, which may result in serious injuries and death.
17. Before riding ,please wear the safety helmet, gloves, protection dress and footwear ,to ensure the safety .
18. It is necessary to receive training from importer or retailer, and learn the operation skills.
19. Learn local laws and regulations of ATV driving from the retailers.
20. It's easy to be burned by break after using the vehicle for a long time.
21. Although the vehicle is with safety designed measures, harms still can not be avoided.

Please read the warning labels on the vehicle carefully, and understand them fully.

1. Warning caution label includes important safety information .
2. User must understand the content of labels completely, and carry out.
3. Make sure all the labels are put on the vehicles already.
4. When finding the labels are not clear or fall off, please ask dealers for them to stick on the vehicles to ensure the integrity of all the labels.

Compliance with the laws and directives:

2006/42/EC	MACHINERY DIRECTIVE
2004/108/EC	EMC DIRECTIVE
97/68/EC	ENGINE POLLUTANT DIRECTIVE

Assembling guide:

1. Place packing box on the flat ground, then open it.(with the scissors or cutter)
2. Use 10# open-end wrench and 6# allen wrench to apart the packing metal.

1st step: Please install steering linkages, tighten nut with 25N.m force, and adjust the balance of the left and

the right.

2nd step: Please install rear shock absorbers, and tighten nuts on both sides with 25N.m force.

3rd step: Please install the front tires (make the tread pattern and cycle valve outside),and tighten nuts with force between 35N.m ~ 45N.m.

4th step: Please install the rear tires (make the tread pattern and cycle valve outside),and tighten nuts with force between 50N.m ~ 60N.m.


5th step: Please install handlebar (adjust to proper angles), and tighten nuts with force between 15N.m ~ 25N.m.

6th step: Please install bumper and accessories, and tighten nuts with force between 15N.m ~ 25N.m.Connect battery cables. When you connect battery cables, electric lock is in the state of "OFF". Positive first, then negative. Disassembly is opposite.

If you fail to understand the instruction, please contact with the local retailers and get professional confirmation after installation.


Loading Adjustment (This step should be checked regularly to ensure safety and convenience):

Check the toe-in of front tire, make sure the front center distance is 5-10mm shorter than the rear center distance.

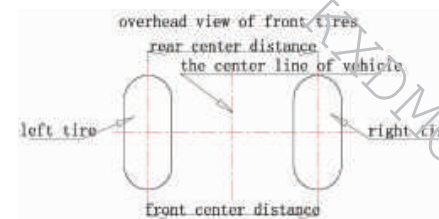


Make sure the connection is ON, and no part is OFF. So vehicle can be started at anytime.

Adjust the Chain: Use the index finger, to press lightly the middle position between power output sprocket and rear sprocket. The best condition should be pressed 15mm to 20mm. If it is not in this range, please adjust the chain adjuster. (Please note: The chain adjuster should be adjusted at the same time to ensure the balance of both side).To loosen the fasten nuts of chain adjuster first, and then unscrew or screw nuts to be best condition. Finally, make the nuts of chain adjuster screwed .

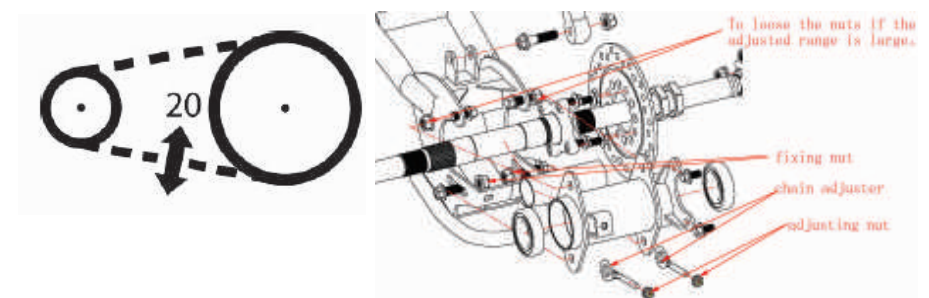

The position of the VIN

The VIN is on the right side of the front frame.

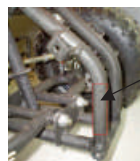

VIN number

Key switch


Key switch is on the right side of the vehicle front part, indicating "OFF" and "NO".

"OFF" condition: Key can be taken out. Light can not be turned on (if light available); engine can not be started.


"ON" condition: Key can not be taken out. When engine is being started, headlight can be turned on (if headlight available).

Function Switch

Functional switch is in left side of handlebar, which consists of horn, start, headlight, flame-out function.

1. Electric horn button . When key switch is on, press it, then it rings.

(2 stroke, pull start engine have not equipped electric horn as the product construction. But manual horn should be assembled according to customers' needs.)

2. Start horn button: Red,  Press it to start the vehicle (when brake hand is ready).

3. Headlight button:  'near light,'  'distance light .

4. Turn-off switch:  'turn off,'  'turn on.

Charger (optional)

1. The input voltage is 220V or 110V (the same as voltage in local place), and output voltage is 12V.

2. When the vehicle is charging, the indicator light turns to be red. When the vehicle is fully charged, the indicator light turns to be green.

Burglar alarm (optional)

1. The input voltage is 12V.

Anti-theft function: Press the "lock" key, vehicle is in alerting condition.

2. Keyless function: Don't need to turn on the key switch. Press the "start" button twice continuously, and then operate the vehicle.

3. Telecontrol stop function: With the keyless function used first, press the button of "unlock" within the certain distance of remote control, the power of vehicle will be turn off)

(Please note: This function is ineffective if vehicle is to be turned by key switch).

Emergency turn off stop switch

It's put in the left side of the rear frame, or on the left handlebar. Pull or press down the switch, the engine will be stopped.

The emergency rope can be fastened on the driver when there is emergency, the vehicle will be stopped automatically by the driver getting off the seats and pulling down the rope.

Tire and Tire gauge

Tire: The proper tire pressure can provide the maximum stability and comfortableness.

Do check and adjust the tire pressure regularly, to make sure the pressure to be on the standard grade.

To find the tire size and standard pressure, please check parameter list and warning label on the vehicle. To find the "Load-bearing" and "speed grade", please check the tire surface.

1. Check tire pressure and condition before driving. Please make the replacement if there is any following condition happened: broken, stabbing, or rim is out of shape. **(Please seek assistance from qualified technician or local retailer for replacement.)**

2. Improper tire pressure will result in hazards. Over the standard pressure can cause a flat tire. Lower than the standard pressure can cause tire relaxation or even dropping, and resulting in losing control of the vehicle.

3. When the tire-tread wearing is over 2mm, please replace new tire in time. **(Please seek assistance from qualified technician or local retailer for replacement.)**

Tire gauge (optional): Manufacturer will provide to customers to measure tie pressure.

Tire gauge is put on the key ring of the key switch for users' convenience.

Measure method: Unscrew valve cap, then press it toward the valve cap with tire gauge. The measured value is tie pressure. Put back the valve cap and screw it after measuring. .

Operating

Inspection before riding

Idling inspection

1. Stabilize the vehicle. shake it up and down to inspect the swing arm and fork condition, to make sure it move normally and without interference.

2. Check whether the front and rear the shock absorber is deformed or leakage or not.

3. Check whether the front suspension and the rear fiat fork is fastened in place.

4. Hold the vehicle when checking.

5. Repair and replace parts in time when finding that negative phenomena.

6. Contact with the dealer when the situation is out of control.

Front brake inspection

Check whether the front brake installation is firm, the braking effect is valid.

1. Front brake handle is mounted on the right side.

2. The brake is working well if backward movement of the brake handle is in the top 20-30mm.

3. Check if the tire rotation is good after releasing the brake lever

4. Contact the dealer for the need of brake maintenance.

5. The front brake lever is with parking feature as well. Use it when parking.

Rear brake inspection

Check whether the rear brake installation is firm, the braking effect is valid.

1. The rear brake is mounted on the left hand, or on the right foot.

2. The brake is working well if backward movement of the brake handle is in the top 20-30mm or downward movement of the top of the foot brake lever 20-30mm.

3. Put the brake lever or foot brake lever back into place quickly and check if the tire rotation is good when the force is removed.

4. Contact the dealer for the need of brake maintenance.

5. Inspect the brake shoe regularly, and replace if timely when it is worn out as the brake shoe is a worn pieces of block.

6. Do not open the brake casually as the brake fluid will damage people's skin. Clean the skin with

water of go to the doctor when it happens.

7. The rear brake lever is with parking feature as well. Use it when parking.

Battery check (if available)

The battery of this vehicle is maintenance free.

1. Check whether battery joint is tight. If there is some part broken ,please change it.
2. Do not throw off the battery which resulting in environment pollution.
3. Do not charge the battery until it is out of power.
4. When the vehicle placed for extended period of inactivity, check the electric quantity every 3 weeks.

Charge it when below 12V.

5. When charging, using or placing the battery, do not put it upside down.

Tool bag inspection

Check whether tool bag is taken every time before riding.

The tool bag is equipped with some professional tools. You can use time when in need.

Self-protection inspection

Self-protection inspection is the guarantee of pleased driving and life safety. Please wear the protective clothing correctly to ensure your safety.

Protective clothing consists of these parts below:



! Every check and inspection step above is necessary, there is danger existing when driving. Please conform the above process before driving, and operate in accordance with the standard strictly when driving will protect your and life safety. The warning sticker put on the surface of vehicle includes important safety information. User must comprehend fully and act strictly. It will cause the extreme injure and even death, if not carefully checking or executing.

Starting

Following the steps below to start the engine:

1. Park the vehicle on the flat ground.
2. Turn on the key switch to "NO" position. Make sure it's well connected.
3. If the engine doesn't start, please open the choke valve first. Try again. Close the choke valve, when the engine steady runs.
3. At the beginning, turn the throttle slowly.

Training

Unprofessional person may not understand the large information of this part. So "Training "will not explain in details .

Advice: Learn from local professional institution or the retailer.

Operating and driving way in the first or second weeks may affect the vehicle future performance. Please pay more attention.

During this period, do not turn the throttle into maximum, should alter the speed often.

After training period, maintain the vehicle according to maintenance form strictly. Keep the vehicle in good condition.

Training is necessary. Improper operation will result in the vehicle, and result in serious injuries and death.

If the driver is without the safety awareness or driving experiences, please drive it under the supervision of the adults.

Riding

Before driving, please review the safety driving way and its importance.

1. Pay attention to the brakes working condition always.
2. Driving with only one hand is dangerous and forbidden.
3. Turn the throttle slowly. Never turn it suddenly.
4. Release the throttle and use the brake, to make it slow down.
5. Make sure both the front brake and the rear brake work at the same time when braking. Never force too hard, that will reduce the working life of the brakes.
6. Do not make dangerous movement while driving to ensure safety.

Parking

1. Turn back the throttle and brake at the same time.
2. Turn the key to "OFF" position when the vehicle stops, then take out the key.
3. Parking function is recommended at this moment to avoid sliding.

Cleaning

After every riding, the driver should clean the vehicle. Then place it on flat ground to clean, and then check.

1. High pressure air or water will harm the vehicle.
2. Do not splash water on these parts: key switch, cables, and battery.
3. Generally, to wash the vehicle with clean water..
4. Do not turn on the key switch immediately after cleaning.
5. Chain should be daubed with lubricating grease.

Storage

The quality will be influenced if you do not use vehicle for a long time. Before storage, vehicle must be checked to ensure it is in a good condition.

1. Check the weight of vehicle from the parameter list.
2. Clean up the vehicle, and then wax its surface.
3. Turn off the key switch
4. Clean the chain, and then lubricate it.
5. Lubricate all the cable parts.
6. Place the vehicle well-packed in a cool ventilated place to avoid damp and sun exposure.

Transport

This is a process of transport the well-packed vehicle.

1. Check the weight of vehicle from the parameter list.
2. Ensure the package well protects the vehicle.
3. Ensure the vehicle is well fixed on the trailer or forklift.
4. Handling with care.

Delivery

This is the process of delivery the well-packed vehicle.

1. Check the weight of vehicle from the parameter list.
2. Ensure the vehicle is placed normally. Do not turn it upside down or side lay it.
3. Ensure the vehicle is well fixed on the trailer or forklift.
4. Handling with care.

Maintenance

Unprofessional person may not understand the large information of this part. So" Training "will not explain in details .For more details ,please contact local retailer.

Necessary maintenance is the important guarantee to keep the vehicle in good condition. Please maintain the vehicle according to time list.




Engine maintenance: After every driving, please close the switch of carburetor and oil-way. Release the rest oil. This is very important. If not do it accordingly, the vehicle will not be easily started after it has been placed for a long time, or carburetor will leak.

Maintenance time list (Please do operate strictly according to maintenance list)

I: Inspection, Maintenance or lubricant replacement C: Cleaning L: Add lubricant

	First week	30days after driving	Each year
Fuel System	I		
Throttle		I	
Air filter		C	
spark plug			
carburetor	I	I&C	
chain	I&L	I&L	
Brake pads			
brake system	I	I	I
Nuts and bolts	I	I	
Tire	I	I	I
Steering system			I
suspension system		I	I
Battery (if available)		I	


The position of spare parts, parameter, Electrical diagram, age warning and other warning labels and plates.

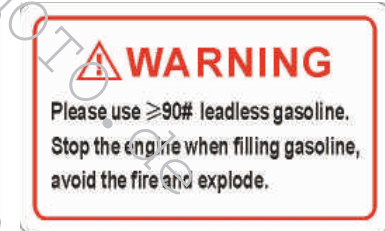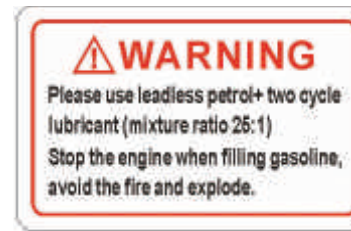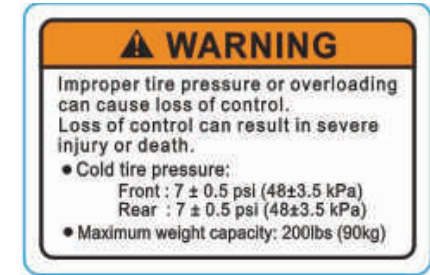




PRODUCT NAME	ATV	PRODUCT MODEL	KXD-ATV-1
LENGTH X WIDTH X HEIGHT (mm)	1020x650x650	ENGINE MODEL	1E44F-6
AXLE BASE (mm)	700	BORE×STROKES	44×37.4
WHEEL BASE (mm)	400	DISPLACEMENT (ml)	49.0
MIN GROUND CLEARANCE (mm)	100	COMPRESSION RATE	8:1
TURNING CIRCLE DIAMETER (mm)	2700	UNLOADING AND ROTATE SPEED(r/min)	2800±150
DRY WEIGHT (kg)	30	RATED POWER Kw (r/min)	1.8/7000
THE WEIGHT OF FULL FURNISHMENT (Kg)	30.5	MAXIMUM TORQUE N.m (r/min)	2.4/5500
RATED LOAD QUALITY (kg)	90	CARBURETOR TYPE	H117A FLOAT (PLUNGER)
MAXIMUM SPEED (Km/h)	37	CLUTH TYPE	AUTOMATIC CENTRIFUGAL
OIL TANK CAPACITY (L)	0.8	SPARK PLUG TYPE	BM6A
FRONT/REAR SHOCK ABSORBER TYPE	HYDRAULIC SPRING	MUFFLER TYPE	IMPEDANCE COMPOUND MUFFLER
FRONT/REAR BRAKE TYPE	F: DISC BRAKE R: DISC BRAKE	STARTING MODE	PULL START
FRONT/REAR BRAKE OPERATION MODE	F: BY HAND R: BY HAND	IGNITION MODE	NONE-TOUCH MAGNETIC CONTROL
FRONT/REAR TIRE SPECIFICATION	3.00-4	DRIVE MODE	CHAIN DRIVE

FRONT/REAR TIRE PRESSURE	F:165kpa R:137kpa	LUBRICATION MODE	PETROL MIXED LUBRICATE
FRONT/REAR RIM TYPE	STEEL	COOLING MODE	AIR-COOLED
HEADLIGHT SPECIFICATION	/	FUEL BRAND	≥90#
PRIMARY REDUCTION RATIO	3.20	MIXTURE RATIO OF FUEL & LUBRICANT OIL	1: 25
FINAL REDUCTION RATIO	4.91	LWA dB(A)	78
DRIVE RATIO	15.71	VIBRATION(m/s ²)	1.0

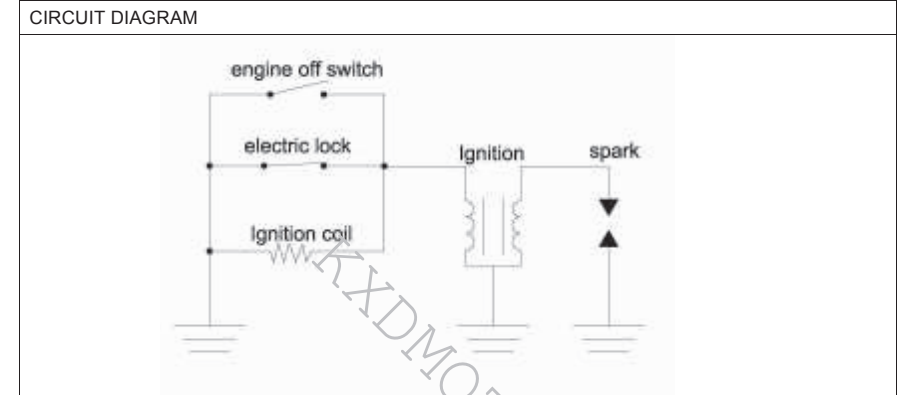


PRODUCT NAME	ATV	PRODUCT MODEL	KXD-ATV-3
--------------	-----	---------------	-----------

LENGTH X WIDTH X HEIGHT (mm)	1020x650x650	ENGINE MODEL	1E44F—6
AXLE BASE (mm)	700	BORE×STROKES	44×37.4
WHEEL BASE (mm)	400	DISPLACEMENT (ml)	49.0
MIN GROUND CLEARANCE (mm)	100	COMPRESSION RATE	8:1
TURNING CIRCLE DIAMETER (mm)	2700	UNLOADING AND ROTATE SPEED(r/min)	2800±150
DRY WEIGHT (kg)	30	RATED POWER Kw (r/min)	1.8/7000
THE WEIGHT OF FULL FURNISHMENT (Kg)	30.5	MAXIMUM TORQUE N.m (r/min)	2.4/5500
RATED LOAD QUALITY (kg)	90	CARBURETOR TYPE	H117A FLOAT (PLUNGER)
MAXIMUM SPEED (Km/h)	37	CLUTH TYPE	AUTOMATIC CENTRIFUGAL
OIL TANK CAPACITY (L)	0.8	SPARK PLUG TYPE	BM6A
FRONT/REAR SHOCK ABSORBER TYPE	HYDRAULIC SPRING	MUFFLER TYPE	IMPEDANCE COMPOUND MUFFLER
FRONT/REAR BRAKE TYPE	F: DISC BRAKE R: DISC BRAKE	STARTING MODE	PULL START
FRONT/REAR BRAKE OPERATION MODE	F: BY HAND R: BY HAND	IGNITION MODE	NONE-TOUCH MAGNETIC CONTROL
FRONT/REAR TIRE SPECIFICATION	3.00-4	DRIVE MODE	CHAIN DRIVE
FRONT/REAR TIRE PRESSURE	F:165kpa R:137kpa	LUBRICATION MODE	PETROL MIXED LUBRICATE
FRONT/REAR RIM TYPE	STEEL	COOLING MODE	AIR-COOLED
HEADLIGHT SPECIFICATION	/	FUEL BRAND	≥90#
PRIMARY REDUCTION RATIO	3.20	MIXTURE RATIO OF FUEL &LUBRICANT OIL	1: 25
FINAL REDUCTION RATIO	4.91	LWA dB(A)	78
DRIVE RATIO	15.71	VIBRATION(m/s ²)	1.0
CIRCUIT DIAGRAM			

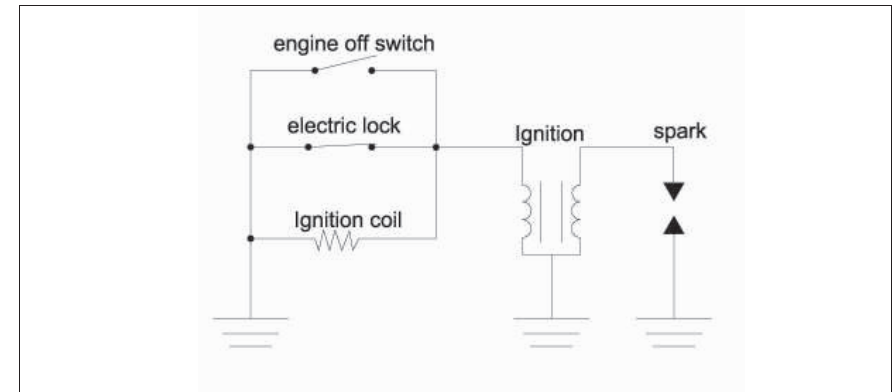


PRODUCT NAME	ATV	PRODUCT MODEL	KXD-ATV-4
LENGTH X WIDTH X HEIGHT (mm)	1020x650x650	ENGINE MODEL	1E44F—6
AXLE BASE (mm)	700	BORE×STROKES	44×37.4
WHEEL BASE (mm)	400	DISPLACEMENT (ml)	49.0
MIN GROUND CLEARANCE (mm)	100	COMPRESSION RATE	8:1
TURNING CIRCLE DIAMETER (mm)	2700	UNLOADING AND ROTATE SPEED(r/min)	2800±150
DRY WEIGHT (kg)	30	RATED POWER Kw (r/min)	1.8/7000

THE WEIGHT OF FULL FURNISHMENT (Kg)	30.5	MAXIMUM TORQUE N.m (r/min)	2.4/5500
RATED LOAD QUALITY (kg)	90	CARBURETOR TYPE	H117A FLOAT (PLUNGER)
MAXIMUM SPEED (Km/h)	37	CLUTH TYPE	AUTOMATIC CENTRIFUGAL
OIL TANK CAPACITY (L)	0.8	SPARK PLUG TYPE	BM6A
FRONT/REAR SHOCK ABSORBER TYPE	HYDRAULIC SPRING	MUFFLER TYPE	IMPEDANCE COMPOUND MUFFLER
FRONT/REAR BRAKE TYPE	F: DISC BRAKE R: DISC BRAKE	STARTING MODE	PULL START
FRONT/REAR BRAKE OPERATION MODE	F: BY HAND R: BY HAND	IGNITION MODE	NONE-TOUCH MAGNETIC CONTROL
FRONT/REAR TIRE SPECIFICATION	3.00-4	DRIVE MODE	CHAIN DRIVE
FRONT/REAR TIRE PRESSURE	F:165kpa R:137kpa	LUBRICATION MODE	PETROL MIXED LUBRICATE
FRONT/REAR RIM TYPE	STEEL	COOLING MODE	AIR-COOLED
HEADLIGHT PECIFICATION	/	FUEL BRAND	≥90#
PRIMARY REDUCTION RATIO	3.20	MIXTURE RATIO OF FUEL &LUBRICANT OIL	1: 25
FINAL REDUCTION RATIO	4.91	LWA dB(A)	78
DRIVE RATIO	15.71	VIBRATION(m/s ²)	1.0

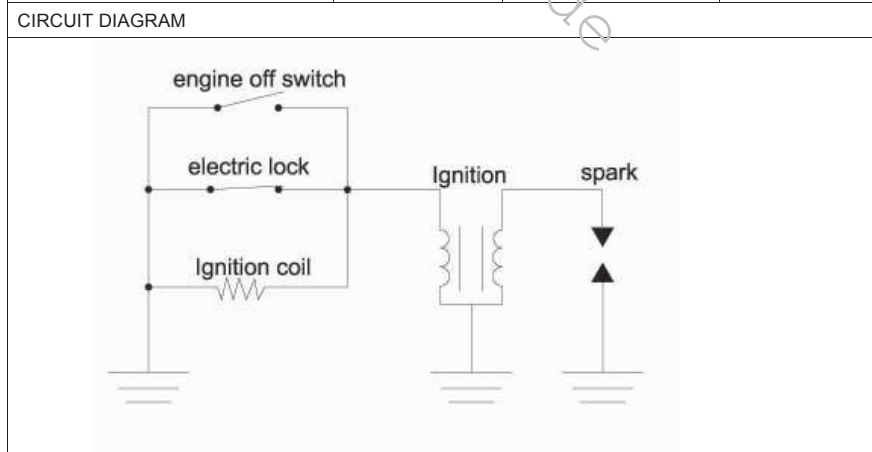


PRODUCT NAME	ATV	PRODUCT MODEL	KXD-ATV-6A
LENGTH X WIDTH X HEIGHT (mm)	1060x620x650	ENGINE MODEL	1E44F-6
AXLE BASE (mm)	705	BORE×STROKES	44×37.4
WHEEL BASE (mm)	450	DISPLACEMENT (ml)	49.0
MIN GROUND CLEARANCE (mm)	100	COMPRESSION RATE	8:1
TURNING CIRCLE DIAMETER (mm)	2930	UNLOADING AND ROTATE SPEED(r/min)	2800±150
DRY WEIGHT (kg)	35	RATED POWER Kw (r/min)	1.8/7000
THE WEIGHT OF FULL FURNISHMENT (Kg)	35.5	MAXIMUM TORQUE N.m (r/min)	2.4/5500
RATED LOAD QUALITY (kg)	90	CARBURETOR TYPE	H117A FLOAT (PLUNGER)
MAXIMUM SPEED (Km/h)	37	CLUTH TYPE	AUTOMATIC CENTRIFUGAL
OIL TANK CAPACITY (L)	0.8	SPARK PLUG TYPE	BM6A
FRONT/REAR SHOCK ABSORBER TYPE	HYDRAULIC SPRING	MUFFLER TYPE	IMPEDANCE COMPOUND MUFFLER
FRONT/REAR BRAKE TYPE	F: DISC BRAKE R: DISC BRAKE	STARTING MODE	PULL START
FRONT/REAR BRAKE OPERATION MODE	F: BY HAND R: BY HAND	IGNITION MODE	NONE-TOUCH MAGNETIC CONTROL

FRONT/REAR TIRE SPECIFICATION	F:4.10-6 R:13X5.00-6	DRIVE MODE	CHAIN DRIVE
FRONT/REAR TIRE PRESSURE	F:165kpa R:137kpa	LUBRICATION MODE	PETROL MIXED LUBRICATE
FRONT/REAR RIM TYPE	STEEL	COOLING MODE	AIR-COOLED
HEADLIGHT SPECIFICATION	/	FUEL BRAND	≥90#
PRIMARY REDUCTION RATIO	3.20	MIXTURE RATIO OF FUEL & LUBRICANT OIL	1: 25
FINAL REDUCTION RATIO	4.91	LWA dB(A)	78
DRIVE RATIO	15.71	VIBRATION(m/s ²)	1.0

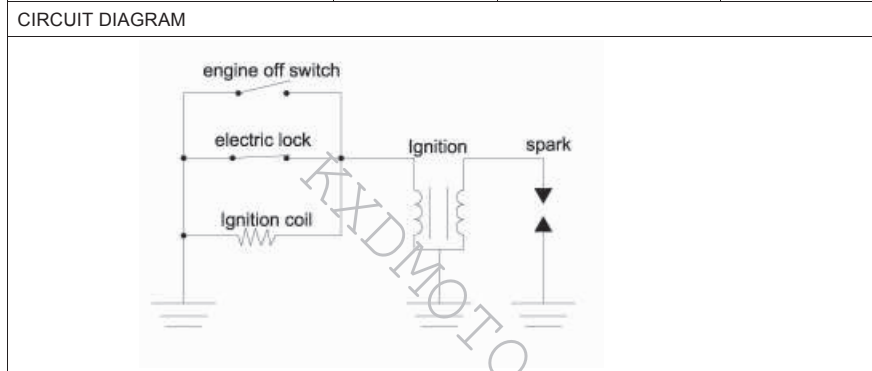


PRODUCT NAME	ATV	PRODUCT MODEL	KXD-ATV-7A
LENGTH X WIDTH X HEIGHT (mm)	1080x615x665	ENGINE MODEL	1E44F-6
AXLE BASE (mm)	705	BORE×STROKES	44×37.4
WHEEL BASE (mm)	450	DISPLACEMENT (ml)	49.0
MIN GROUND CLEARANCE (mm)	100	COMPRESSION RATE	8:1
TURNING CIRCLE DIAMETER (mm)	2930	UNLOADING AND ROTATE SPEED(r/min)	2800±150
DRY WEIGHT (kg)	37	RATED POWER Kw (r/min)	1.8/7000
THE WEIGHT OF FULL FURNISHMENT (Kg)	39	MAXIMUM TORQUE N.m (r/min)	2.4/5500
RATED LOAD QUALITY (kg)	90	CARBURETOR TYPE	H117A FLOAT (PLUNGER)
MAXIMUM SPEED (Km/h)	37	CLUTH TYPE	AUTOMATIC CENTRIFUGAL
OIL TANK CAPACITY (L)	2	SPARK PLUG TYPE	BM6A
FRONT/REAR SHOCK ABSORBER TYPE	HYDRAULIC SPRING	MUFFLER TYPE	IMPEDANCE COMPOUND MUFFLER
FRONT/REAR BRAKE TYPE	F: DISC BRAKE R: DISC BRAKE	STARTING MODE	PULL START
FRONT/REAR BRAKE OPERATION MODE	F: BY HAND R: BY HAND	IGNITION MODE	NONE-TOUCH MAGNETIC CONTROL
FRONT/REAR TIRE SPECIFICATION	F:4.10-6 R:13X5.00-6	DRIVE MODE	CHAIN DRIVE
FRONT/REAR TIRE PRESSURE	F:165kpa R:137kpa	LUBRICATION MODE	PETROL MIXED LUBRICATE
FRONT/REAR RIM TYPE	STEEL	COOLING MODE	AIR-COOLED
HEADLIGHT SPECIFICATION	/	FUEL BRAND	≥90#
PRIMARY REDUCTION RATIO	3.20	MIXTURE RATIO OF FUEL & LUBRICANT OIL	1: 25
FINAL REDUCTION RATIO	4.91	LWA dB(A)	78
DRIVE RATIO	15.71	VIBRATION(m/s ²)	1.0
CIRCUIT DIAGRAM			

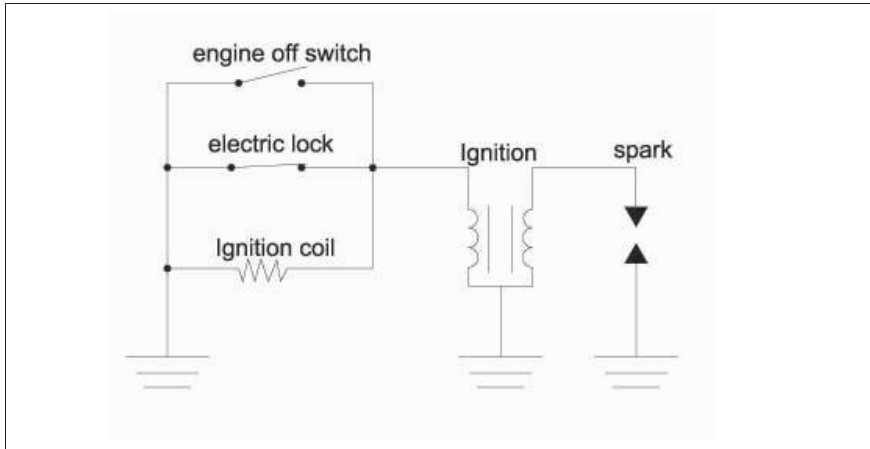

PRODUCT NAME	ATV	PRODUCT MODEL	KXD-ATV-8A
LENGTH X WIDTH X HEIGHT (mm)	1100x620x665	ENGINE MODEL	1E44F-6
AXLE BASE (mm)	705	BORE×STROKES	44×37.4
WHEEL BASE (mm)	450	DISPLACEMENT (ml)	49.0
MIN GROUND CLEARANCE (mm)	100	COMPRESSION RATE	8:1
TURNING CIRCLE DIAMETER (mm)	2930	UNLOADING AND ROTATE SPEED(r/min)	2800±150
DRY WEIGHT (kg)	37	RATED POWER Kw	1.8/7000

		(r/min)	
THE WEIGHT OF FULL FURNISHMENT (Kg)	39	MAXIMUM TORQUE N.m (r/min)	2.4/5500
RATED LOAD QUALITY (kg)	90	CARBURETOR TYPE	H117A FLOAT (PLUNGER)
MAXIMUM SPEED (Km/h)	37	CLUTH TYPE	AUTOMATIC CENTRIFUGAL
OIL TANK CAPACITY (L)	2	SPARK PLUG TYPE	BM6A
FRONT/REAR SHOCK ABSORBER TYPE	HYDRAULIC SPRING	MUFFLER TYPE	IMPEDANCE COMPOUND MUFFLER
FRONT/REAR BRAKE TYPE	F: DISC BRAKE R: DISC BRAKE	STARTING MODE	PULL START
FRONT/REAR BRAKE OPERATION MODE	F: BY HAND R: BY HAND	IGNITION MODE	NONE-TOUCH MAGNETIC CONTROL
FRONT/REAR TIRE SPECIFICATION	F:4.10-6 R:13X5.00-6	DRIVE MODE	CHAIN DRIVE
FRONT/REAR TIRE PRESSURE	F:165kpa R:137kpa	LUBRICATION MODE	PETROL MIXED LUBRICATE
FRONT/REAR RIM TYPE	STEEL	COOLING MODE	AIR-COOLED
HEADLIGHT PECIFICATION	/	FUEL BRAND	≥90#
PRIMARY REDUCTION RATIO	3.20	MIXTURE RATIO OF FUEL &LUBRICANT OIL	1: 25
FINAL REDUCTION RATIO	4.91	LWA dB(A)	78
DRIVE RATIO	15.71	VIBRATION(m/s ²)	1.0


CIRCUIT DIAGRAM

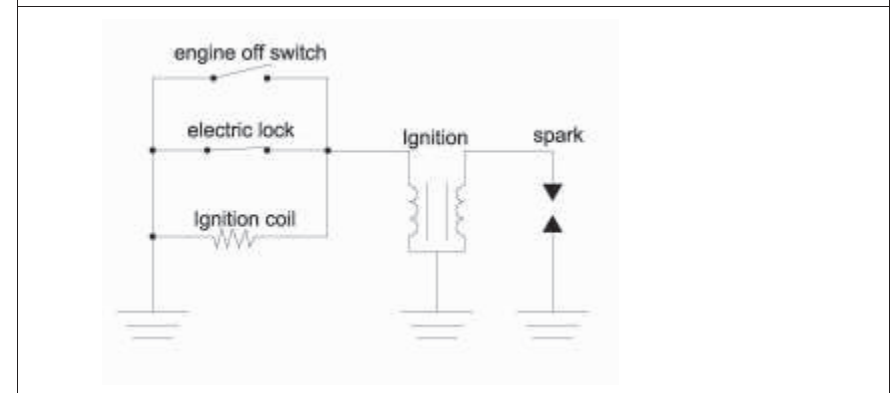



PRODUCT NAME	ATV	PRODUCT MODEL	KXD-ATV-9
LENGTH X WIDTH X HEIGHT (mm)	1030x560x630	ENGINE MODEL	1E44F-6
AXLE BASE (mm)	690	BORE×STROKES	44×37.4
WHEEL BASE (mm)	450	DISPLACEMENT (ml)	49.0
MIN GROUND CLEARANCE (mm)	120	COMPRESSION RATE	8:1
TURNING CIRCLE DIAMETER (mm)	4500	UNLOADING AND ROTATE SPEED(r/min)	2800±150
DRY WEIGHT (kg)	36.5	RATED POWER Kw (r/min)	1.8/7000
THE WEIGHT OF FULL FURNISHMENT (Kg)	37	MAXIMUM TORQUE N.m (r/min)	2.4/5500
RATED LOAD QUALITY (kg)	90	CARBURETOR TYPE	H117A FLOAT (PLUNGER)
MAXIMUM SPEED (Km/h)	37	CLUTH TYPE	AUTOMATIC CENTRIFUGAL
OIL TANK CAPACITY (L)	0.8	SPARK PLUG TYPE	BM6A
FRONT/REAR SHOCK ABSORBER TYPE	HYDRAULIC SPRING	MUFFLER TYPE	IMPEDANCE COMPOUND MUFFLER
FRONT/REAR BRAKE TYPE	F: DISC BRAKE R: DISC BRAKE	STARTING MODE	PULL START
FRONT/REAR BRAKE OPERATION MODE	F: BY HAND R: BY HAND	IGNITION MODE	NONE-TOUCH MAGNETIC CONTROL


FRONT/REAR SPECIFICATION	TIRE F:4.10-6 R:13X5.00-6	DRIVE MODE	CHAIN DRIVE
FRONT/REAR TIRE PRESSURE	F:165kpa R:137kpa	LUBRICATION MODE	PETROL MIXED LUBRICATE
FRONT/REAR RIM TYPE	STEEL	COOLING MODE	AIR-COOLED
HEADLIGHT PECIFICATION	/	FUEL BRAND	≥90#
PRIMARY REDUCTION RATIO	3.20	MIXTURE RATIO OF FUEL &LUBRICANT OIL	1: 25
FINAL REDUCTION RATIO	4.91	LWA dB(A)	78
DRIVE RATIO	15.71	VIBRATION(m/s ²)	1.0

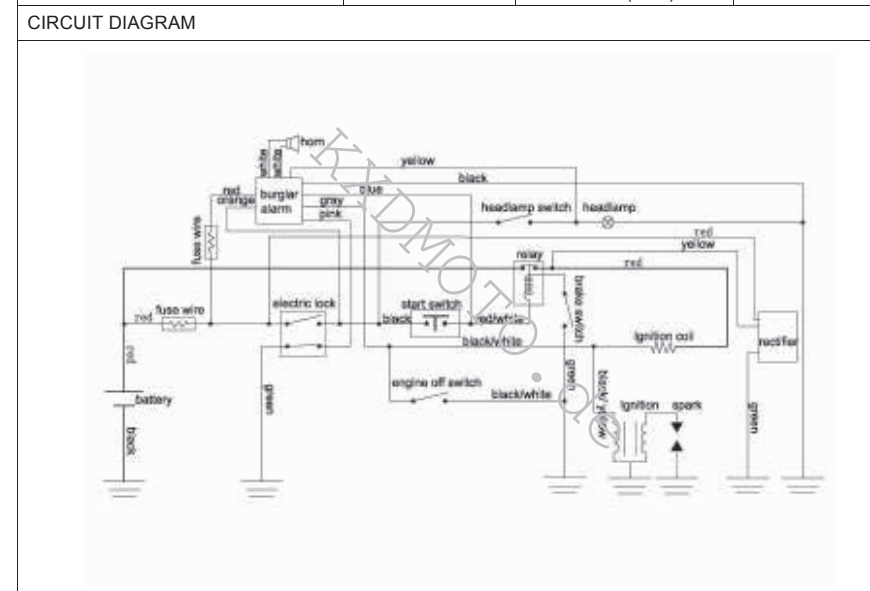




PRODUCT NAME	ATV	PRODUCT MODEL	KXD-ATV-6B
LENGTH X WIDTH X HEIGHT (mm)	1100x630x730	ENGINE MODEL	1P44FZA
AXLE BASE (mm)	725	BORE×STROKES	44×37.4
WHEEL BASE (mm)	500	DISPLACEMENT (ml)	49.0
MIN GROUND CLEARANCE (mm)	125	COMPRESSION RATE	9.0:1
TURNING CIRCLE DIAMETER (mm)	3250	UNLOADING AND ROTATE SPEED(r/min)	1700±100
DRY WEIGHT (kg)	48	RATED POWER Kw (r/min)	1.8/6000±100
THE WEIGHT OF FULL FURNISHMENT (Kg)	50	MAXIMUM TORQUE N.m (r/min)	3.0/4500±100
RATED LOAD QUALITY (kg)	90	CARBURETOR TYPE	PZ14Q (PLUNGER)
MAXIMUM SPEED (Km/h)	40	CLUTH TYPE	MULTI-DISC WET CLUTCH
OIL TANK CAPACITY (L)	2	SPARK PLUG TYPE	A7TC
FRONT/REAR SHOCK ABSORBER TYPE	HYDRAULIC SPRING	MUFFLER TYPE	IMPEDANCE COMPOUND MUFFLER
FRONT/REAR BRAKE TYPE	F: DISC BRAKE R: DISC BRAKE	STARTING MODE	ELECTRIC START
FRONT/REAR BRAKE OPERATION MODE	F: BY HAND R: BY HAND	IGNITION MODE	CDI
FRONT/REAR TIRE SPECIFICATION	F:4.10-6 R:13X5.00-6	DRIVE MODE	CHAIN DRIVE

FRONT/REAR TIRE PRESSURE	F:165kpa R:137kpa	LUBRICATION MODE	PRESSURE, SPLASH TYPE
FRONT/REAR RIM TYPE	STEEL	COOLING MODE	AIR COOLED
HEADLIGHT PECIFICATION	/	FUEL BRAND	≥90#
PRIMARY REDUCTION RATIO	3.0	MIXTURE RATIO OF FUEL & LUBRICANT OIL	/
FINAL REDUCTION RATIO	3.857	LWA dB(A)	78
DRIVE RATIO	19.93	VIBRATION(m/s ²)	1.0

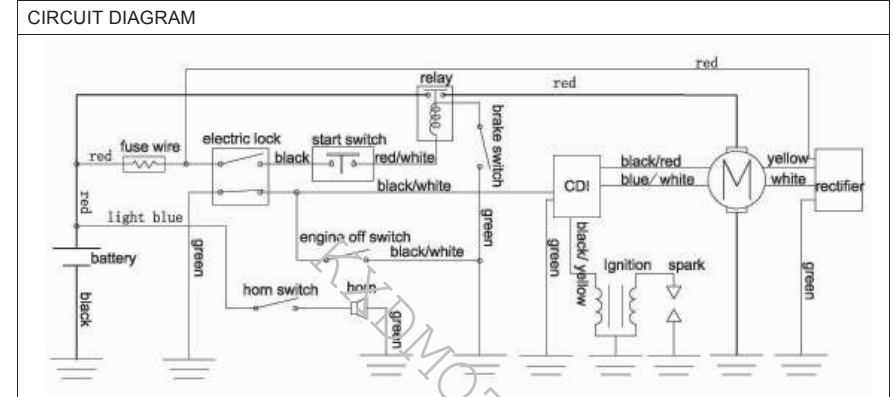

PRODUCT NAME	ATV	PRODUCT MODEL	KXD-ATV-7B
--------------	-----	---------------	------------

LENGTH X WIDTH X HEIGHT (mm)	1080x630x710	ENGINE MODEL	1P44FZA
AXLE BASE (mm)	725	BORE×STROKES	44×37.4
WHEEL BASE (mm)	500	DISPLACEMENT (ml)	49.0
MIN GROUND CLEARANCE (mm)	110	COMPRESSION RATE	9.0:1
TURNING CIRCLE DIAMETER (mm)	3250	UNLOADING AND ROTATE SPEED(r/min)	1700±100
DRY WEIGHT (kg)	51	RATED POWER Kw (r/min)	1.8/6000±100
THE WEIGHT OF FULL FURNISHMENT (Kg)	53	MAXIMUM TORQUE N.m (r/min)	3.0/4500±100
RATED LOAD QUALITY (kg)	90	CARBURETOR TYPE	PZ14Q (PLUNGER)
MAXIMUM SPEED (Km/h)	40	CLUTH TYPE	MULTI-DISC WET CLUTCH
OIL TANK CAPACITY (L)	2	SPARK PLUG TYPE	BM6A
FRONT/REAR SHOCK ABSORBER TYPE	HYDRAULIC SPRING	MUFFLER TYPE	IMPEDANCE COMPOUND MUFFLER
FRONT/REAR BRAKE TYPE	F: DISC BRAKE R: DISC BRAKE	STARTING MODE	ELECTRIC START
FRONT/REAR BRAKE OPERATION MODE	F: BY HAND R: BY HAND	IGNITION MODE	NONE-TOUCH MAGNETIC CONTROL
FRONT/REAR TIRE SPECIFICATION	F:4.10-6 R:13X5.00-6	DRIVE MODE	CHAIN DRIVE
FRONT/REAR TIRE PRESSURE	F:165kpa R:137kpa	LUBRICATION MODE	PRESSURE, SPLASH TYPE
FRONT/REAR RIM TYPE	STEEL	COOLING MODE	AIR-COOLED
HEADLIGHT PECIFICATION	/	FUEL BRAND	≥90#
PRIMARY REDUCTION RATIO	3.0	MIXTURE RATIO OF FUEL &LUBRICANT OIL	/
FINAL REDUCTION RATIO	3.857	LWA dB(A)	78
DRIVE RATIO	19.93	VIBRATION(m/s ²)	1.0
CIRCUIT DIAGRAM			

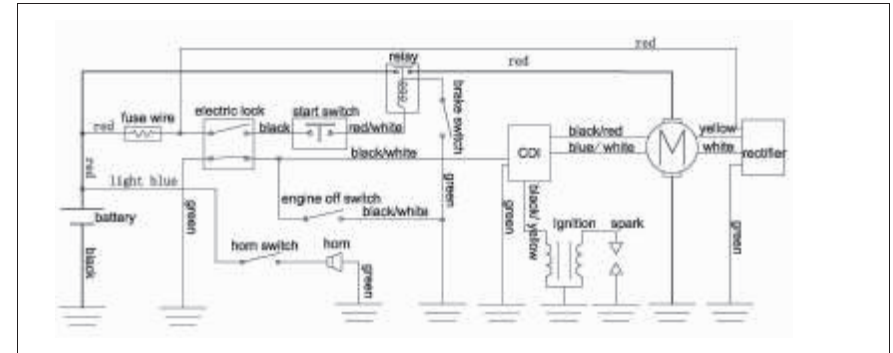

PRODUCT NAME	ATV	PRODUCT MODEL	KXD-ATV-8B
LENGTH X WIDTH X HEIGHT (mm)	1100x630x710	ENGINE MODEL	1P44FZA
AXLE BASE (mm)	725	BORE×STROKES	44×37.4
WHEEL BASE (mm)	500	DISPLACEMENT (ml)	49.0
MIN GROUND CLEARANCE (mm)	110	COMPRESSION RATE	9.0:1
TURNING CIRCLE DIAMETER (mm)	3250	UNLOADING AND ROTATE SPEED(r/min)	1700±100
DRY WEIGHT (kg)	51	RATED POWER Kw (r/min)	1.8/6000±100
THE WEIGHT OF FULL	53	MAXIMUM TORQUE	3.0/4500±100

FURNISHMENT (Kg)		N.m (r/min)	
RATED LOAD QUALITY (kg)	90	CARBURETOR TYPE	PZ14Q (PLUNGER)
MAXIMUM SPEED (Km/h)	40	CLUTH TYPE	MULTI-DISC WET CLUTCH
OIL TANK CAPACITY (L)	2	SPARK PLUG TYPE	BM6A
FRONT/REAR SHOCK ABSORBER TYPE	HYDRAULIC SPRING	MUFFLER TYPE	IMPEDANCE COMPOUND MUFFLER
FRONT/REAR BRAKE TYPE	F: DISC BRAKE R: DISC BRAKE	STARTING MODE	ELECTRIC START
FRONT/REAR BRAKE OPERATION MODE	F: BY HAND R: BY HAND	IGNITION MODE	NONE-TOUCH MAGNETIC CONTROL
FRONT/REAR TIRE SPECIFICATION	F:4.10-6 R:13X5.00-6	DRIVE MODE	CHAIN DRVE
FRONT/REAR TIRE PRESSURE	F:165kpa R:137kpa	LUBRICATION MODE	PRESSURE, SPLASH TYPE
FRONT/REAR RIM TYPE	STEEL	COOLING MODE	AIR-COOLED
HEADLIGHT PECIALIFICATION		FUEL BRAND	≥90#
PRIMARY REDUCTION RATIO	3.0	MIXTURE RATIO OF FUEL &LUBRICANT OIL	/
FINAL REDUCTION RATIO	3.857	LWA dB(A)	78
DRIVE RATIO	19.93	VIBRATION(m/s ²)	1.0

CIRCUIT DIAGRAM

